



Roca

T-500

ES Modo de empleo / Instrucciones de montaje


 
6

A5A2K18






A5A2M18


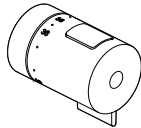



 P 	P bar	 MAX. 10	
 P 	P bar	 MAX. 5 MIN. 0,5	 3 1 
		 P  P	P – P < 2 
 T	°C	 -70 MAX. -45 MIN.	 -65 -50 
 Q (3 bar)	l/min	  20	 ECO - 8 MAX. 15

A5A2K18

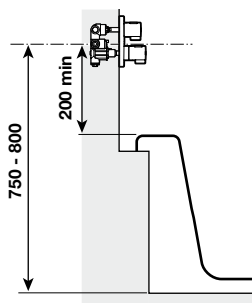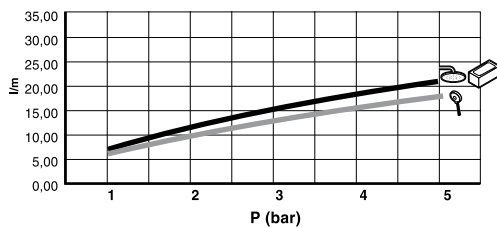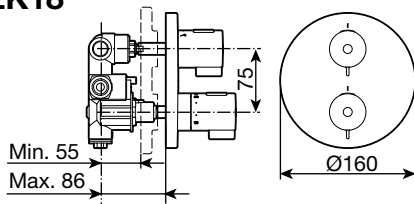


A5A2M18

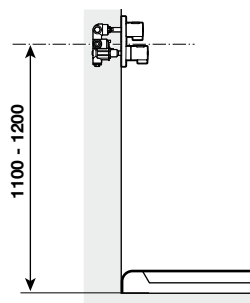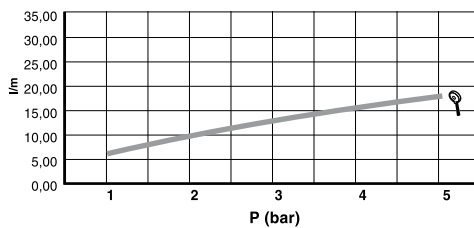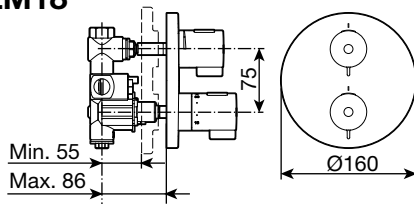




A5A2K18

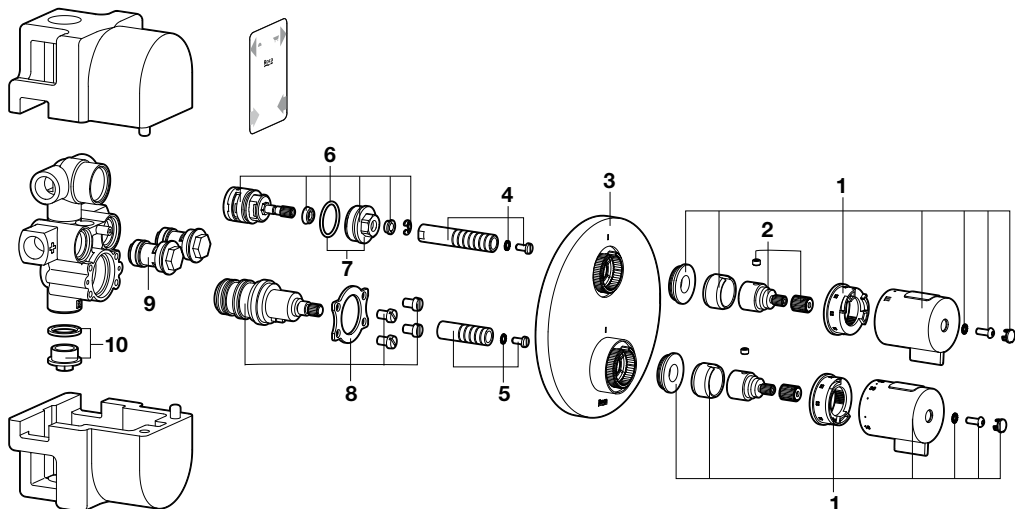

A5A2M18

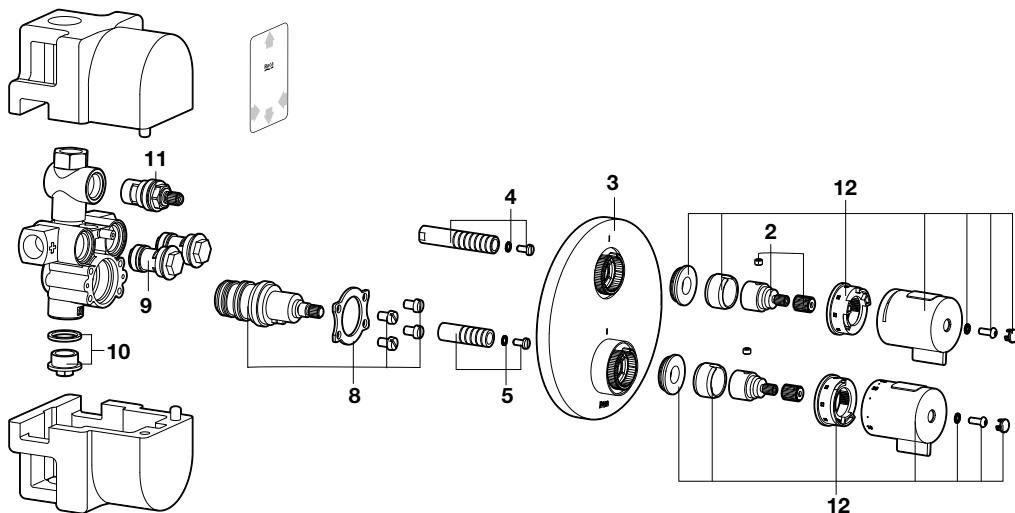

1 - AG0227000R

2 - A525017503

3 - AG0139700R

4 - AG0140700R

5 - AG0152703R

6 - AG0131903R

7 - AG0030603R

8 - A525017303

9 - A525018003

10 - AG0094803R

11 - AG0020903R

12 - AG0227100R