


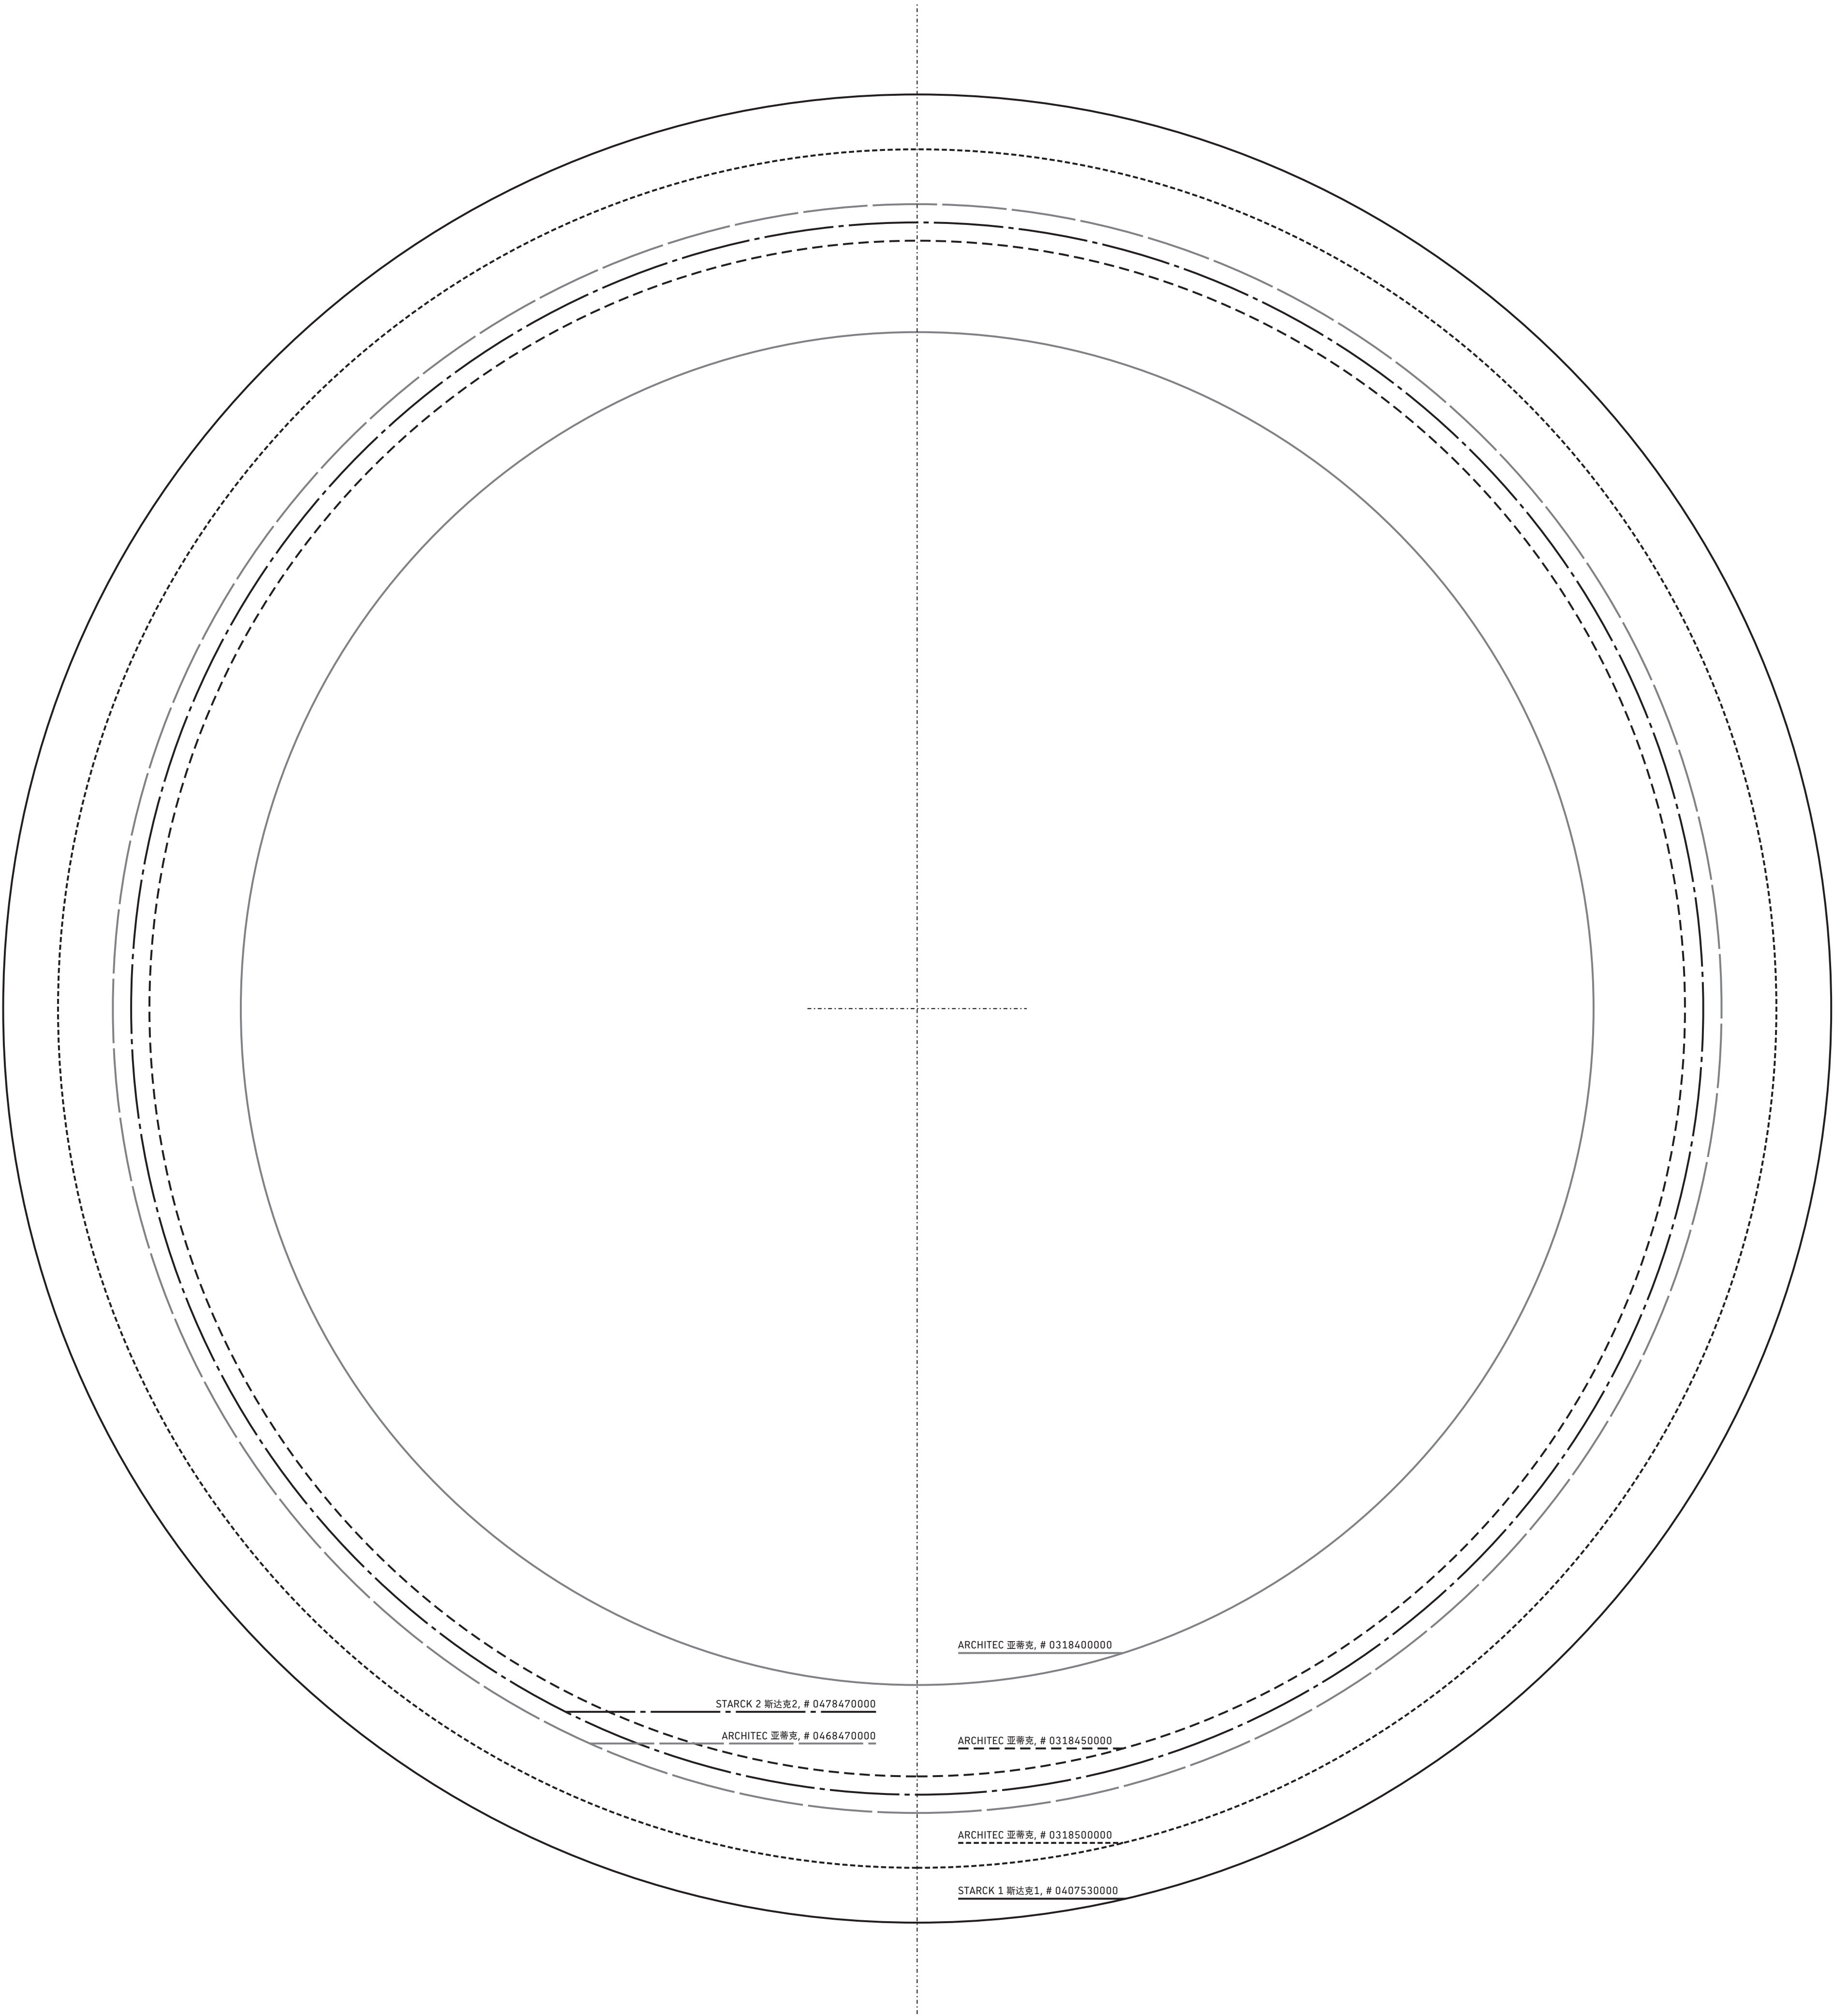

Schablone und Montageanleitung Einbauwaschtisch von oben
Template and mounting instructions Vanity basin installation from above
Gabarit et notice de montage Vasque par dessus
Sjabloon en montageaanwijzing Inbouwwastafel van bovenaf
Sagoma e istruzioni di montaggio Lavabo a incasso dall'alto
Plantilla e instrucciones de montaje Lavabo para empotrar desde arriba
Esquema de corte e instruções de montagem Lavatórios de embutir por cima
Şablon ve montaj kılavuzu Tezgah üstü lavabo
模板及安装说明 台上式脸盆

ARCHITEC 亚蒂克, # 0318400000
ARCHITEC 亚蒂克, # 0318450000
ARCHITEC 亚蒂克, # 0318500000
ARCHITEC 亚蒂克, # 0468470000
STARCK 1 斯达克1, # 0407530000
STARCK 2 斯达克2, # 0478470000

Duravit AG
Werderstr. 36
78132 Hornberg
Germany
Phone +49 78 33 70 0
Fax +49 78 33 70 289
info@duravit.de
www.duravit.de

